

5158 Ancona Breakfast Table

Thank you for purchasing this Ancona breakfast table. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.



This item is **HEAVY**



Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you purchased this product.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.


This product takes approximately **20 MINUTES** to assemble with **2 PEOPLE**.

The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

Ref: 00237/5158

Fittings and parts checklist


Α	Top Panel x I	G	30mm Bolt × 6	O Taliana
В	Connection panel × I	I	80mm Bolt x 2	
С	Column x I	ı	Nut × 2	
D	Base panel x I	J	Locking washer × 2	0
E	Spanner x I	K	Flat washer × 2	0
F	Allen key x I			

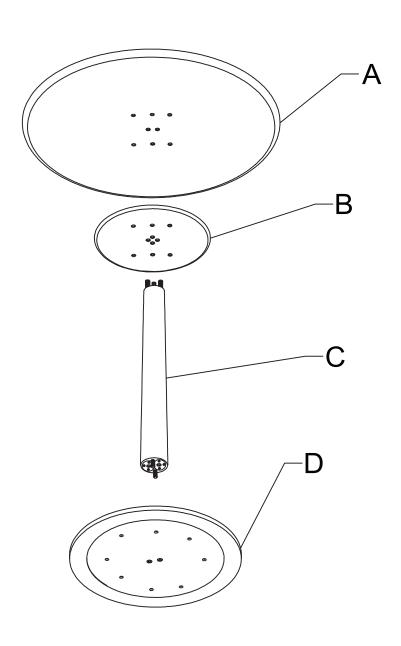

Step by step assembly instructions

1. Insert the column(C) into the connection panel (B) as shown below. No fittings required in this step.



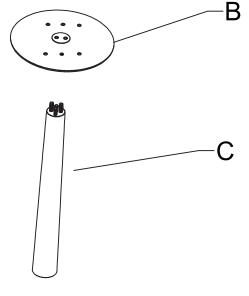

2. Using the spanner(E) to fix the 2pcs nut (I), 2pcs locking washer (J) and 2pcs flat washer(K) onto the bolts as shown below. Tighten the nuts to make sure that the rail (C) and connection panel (B) hold in place well.





I * 2




J * 2




K * 2



F * 1

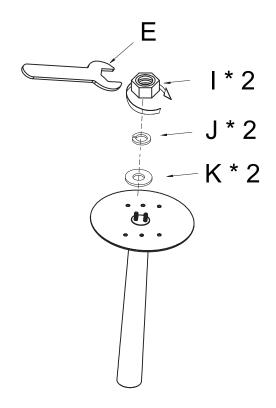


3. Assemble the connection panel (B) onto the top panel (A) by using the 6pcs 30mm bolts(G) with the help of the allen key (F) provided. Steps see below.

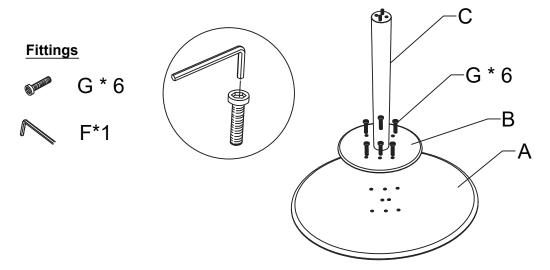


4. The last step assemble the base panel (D) onto the column (C) by using the 2pcs 80mm bolts(H) with the help of the allen key (F) provided. Steps see below.

Then lift the table onto its base so that the top panel is facing upwards and assembly is complete.

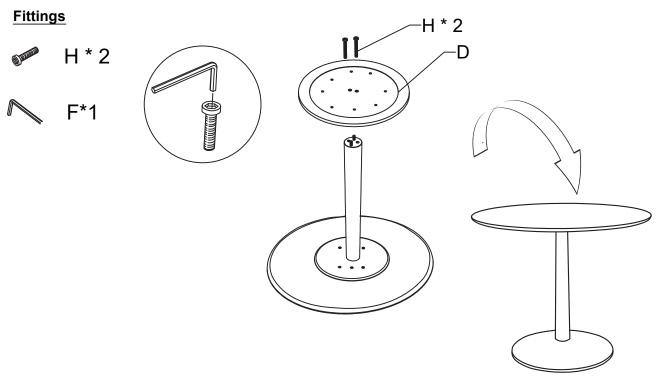

If the table is not level on your floor use the wedges provided, and snap them off so that they do not protrude out from the base panel. you can also snap them lengthways if desired.

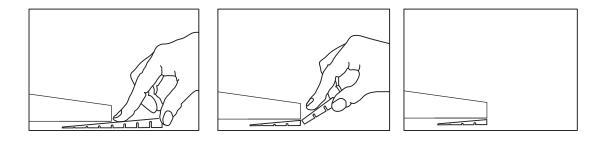

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE